

NEW W-LOCK – QUICK START GUIDE

Please use web server on: www.easysset.eu



Thank you for purchasing our device.


1. Please read this Quick Start Guide first...
2. If antenna is not already mounted on the housing, mount antenna on a mounting location.
3. **Insert SIM card (Micro SIM) in SOLO device** – gold contacts down and cut off corner on the outside (see picture below).
The unit must be switched OFF when you insert the SIM card!
IMPORTANT: ERASE THE PIN CODE ON SIM CARD!
Insert SIM carefully as SIM holder is fragile if forced!
4. Connect all the wiring to the mounting location.
5. Power ON the W-LOCK device.
IMPORTANT: We recommend using the appropriate power supply. If you ordered with the device it is enclosed!
6. Wait until YELLOW LED start flashing in 5 second interval (0,5 sec ON / 5 sec OFF) and BLUE LED (LED 1) starts flashing. This is set in around 30 seconds.
7. SOLO unit is now ready to operate.

IMPORTANT: Before managing - the device must be in normal operation mode!

WIRING

Wiring is minimal and apart from power supply source to W-LOCK & door release (gate automatic etc.) wires, there is no other required wiring.

TERMINAL CONNECTIONS

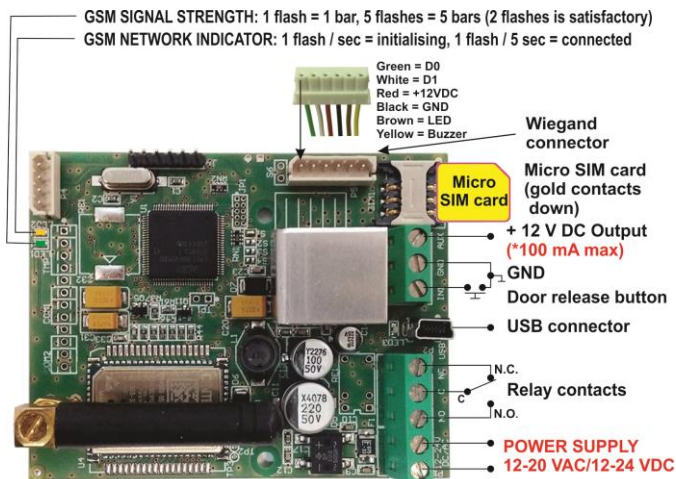

***Do not use the 12V AUX power output for electric lock driving! You can use it to power external sensors: Short-term current load (up to 1 minute) - up to 500mA; Long-term current load - up to 100mA! Use separate power source for door electric lock!**

PROGRAMMING SETTINGS BY SMS (TEXT)

Note: You can send individual commands like: `;PIN1=1234`; or together in one long text as shown below in text.

Don't exceed 160 characters.

SETUP PIN ACCESS CODES (PIN1 to PIN1000) – FOR KEYPAD:

Set 4 digit PIN access codes by sending SMS to W-LOCK:
`;PIN1=1234;PIN2=2345;...to...;PIN1000=5588`;

NOTE: If the confirmation SMS is needed, put “+” at the beginning of the text command: `;+PIN1=1234;PIN2=2345`;

Delete PIN access codes by sending:

`;PIN1=;PIN2=;PIN3=;PIN4=;PIN5=; ... up to ;PIN1000=`;

Check current PIN access codes: Request all PIN codes: `;PPIN`;
Request a block of PIN codes: `;PPIN=1,5`; (access codes 1 – 5)

SETUP TEMPORARY SPIN ACCESS CODES (SPIN1 to SPIN50):

Up to 50 SPIN Access Codes and how many of times will it be used.

NOTE: Set the SPIN codes active output first: `;SPINO=1`; and SPIN code and how many times will it be used: `;SPIN8=4321;SPINC8=3`;

Explanation: Output set to trigger is Relay 1, SPIN8 code 4321 can be used 3 times and after the 3th time won't be valid anymore.

Check current SPIN access codes: `;PSPIN`; - prints SPIN parameters.

USING THE KEYPAD FOR ACTIVATING THE OUTPUT:

Type PIN or SPIN access code on the keypad and press ‘#’ to confirm:
Ex.: **1234#** (1 long beep = PIN correct, 3 short beeps = PIN incorrect)

SETUP CALLER ID USERS (CLIP)

Add Caller ID Users for incoming call access:

`;CLP1=xxxxxxxxxx;CLP2=xxxxxxxxxx; ... up to CLP500=xxxxxxxxxx`;

Delete Caller ID Users for incoming call access:

`;CLP1=;CLP2=;CLP3=;CLP4=;CLP5=; ... up to CLP500=`;

Check current Caller ID Users: Request all Users: `;PCLP`;
Request a block of user slots: `;PCLP=1,5`; (user slots 1 – 5)

SET OUTPUT SWITCHING CONFIGURATION:

Output 1 (3 second pulse default = `;OS1=3`), Change to 5 second pulse: `;OS1=5`; Change to latching (ON / OFF): `;OS1=1`;

ACCESSING TO THE UNIT FOR CHANGING PARAMETERS:

Set the TN1 – TN5 telephone numbers of Authorized Users, who have the full access to the W-LOCK unit (to set or delete Caller ID numbers of the users, change parameters, receive alarms, ...):

`;TN1=xxxxxxxxxx;TN2=xxxxxxxxxx;...;TN5=xxxxxxxxxx`;

SECURITY LEVEL – SL:

SL parameter from 0 to 5 defines which telephone number stored in the phone book from TN1 – TN5 can enter into programming and remote control of the W-LOCK.

SL=0 – All calls and SMS are accepted

SL=1 – Only number stored under parameter TN1 has access to the W-LOCK device, ...

SL=4 – Numbers stored under parameters TN1 to TN4 have access to the W-LOCK device.

Example: `;SL=1`; – Only the TN1 has access to the W-LOCK device.

OPERATION & TESTING

Follow these steps to test the system...

1. **SWITCH ON POWER:** The device starts to initialize indicated by YELLOW flashing once per second. When YELLOW is flashing once per 5 seconds and GREEN starts flashing, the device is ready to program. Between 2 – 5 GREEN flashes is recommended.
2. **PROGRAM BY SMS:** Send minimum setting (1 PIN access code or 1 User phone number): `;PIN1=1234`; or `;CLP1=phonenumber`;
3. **REPLY CONFIRMATION:** You should receive an SMS back to confirm the setting. If you don't, you either left off the ‘+’ in the SMS string, or the device is not ready, or the SIM has no credit.
4. **TEST THE W-LOCK DEVICE:** Call from the phone set as CLP1 to test the output switch or type PIN code on keypad and press ‘#’.

PROGRAMMING SOFTWARE

Test the unit before trying to use programming software.

NOTE: If you are using 1 or a few users or few PIN access codes, it is far more efficient to use the above SMS setup procedure.

1. Get the software EasySet & USB driver files from the CD or WEB.
2. Install the EasySet software (please be careful to download the correct PC program - x86 or x64): Double click on *.msi file.
3. Plug device into your PC with USB to Mini USB cable: With valid SIM card and in normal operation mode – the W-LOCK device must be registered on the GSM network, GREEN LED: 2 – 5 flashes.
4. Start EasySet SW: Double click on EasySet icon. The W-LOCK must be connected to PC via USB. Select connection port: choose the COM port number (Device manager → Ports) and click Connect.
5. Program settings: Always “Read configuration” first, before any programming action by PC. Go through the tabs to change settings. From the ‘Home’ tab press “Send configuration” to program the W-LOCK. Then “Save configuration to file” for future access via “Load configuration from file”.

TROUBLESHOOTING

Please check the following before calling for support:

1. You have GSM signal (GREEN flashing LED),
2. You have a tested, credited, working SIM card inserted,
3. You have followed above ‘OPERATION & TESTING’ procedure.

TECHNICAL SUPPORT

See the complete Installation Manual for full information. This is a basic “Quick Start Guide” only. Please contact your Supplier for further information, if you have tried the above and cannot resolve the issue.